


# MACHINE OPERATION

Additional information (including troubleshooting and service) can be found in the individual chapters of the Instructions for use.

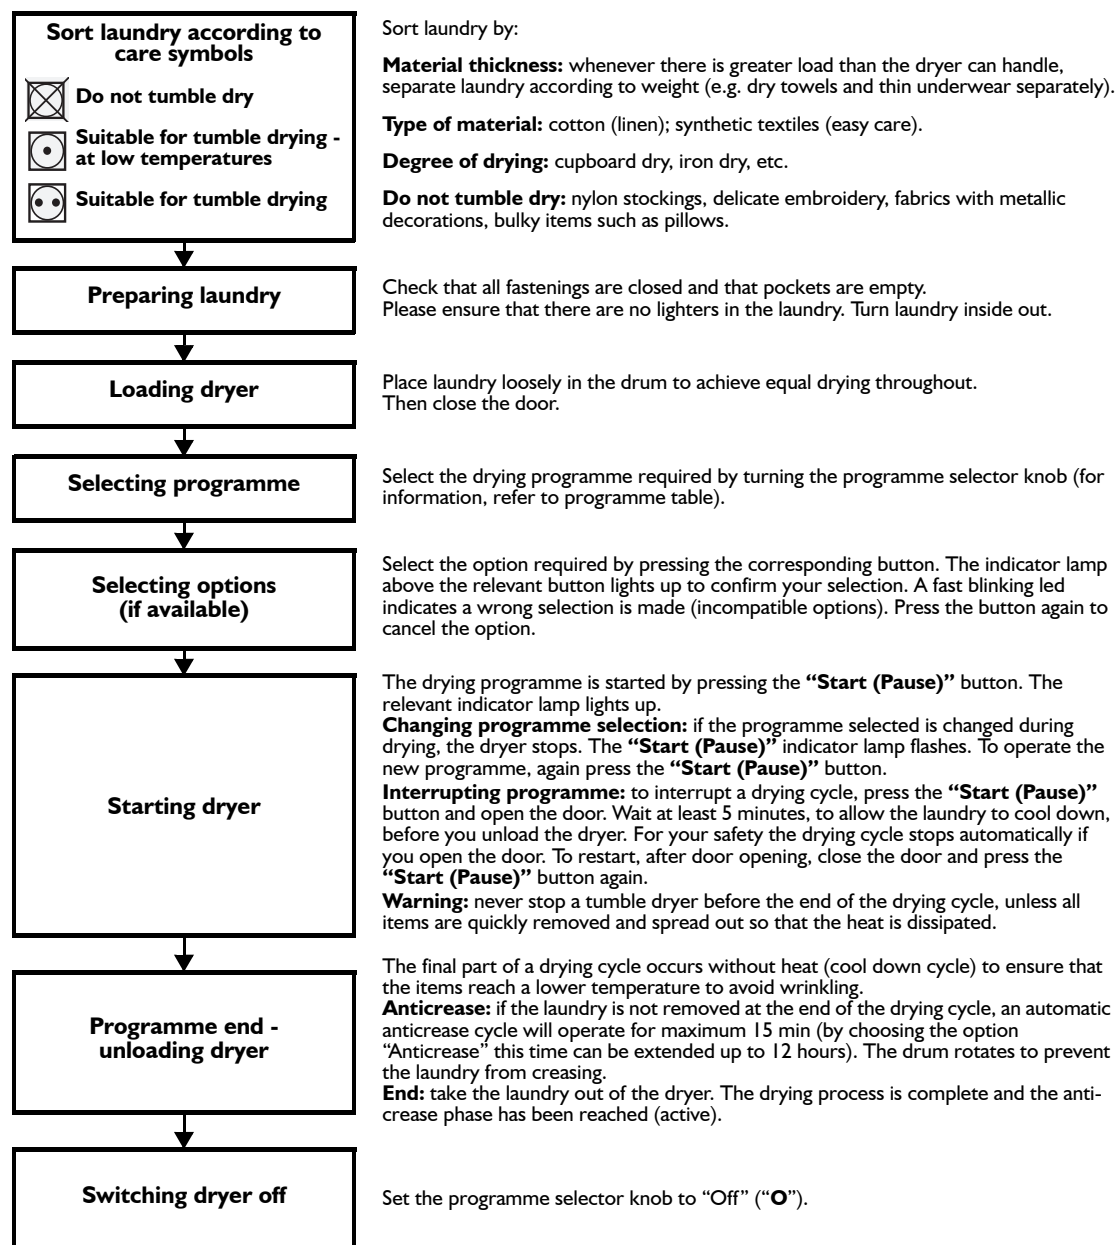














**Cleaning the door filter after every cycle:** open door, pull door filter up and out of machine and open it. Brush lint using a soft brush or your fingertips. Close door filter and push firmly back into place.

**Emptying water container:** pull container out by the handle and empty. Replace the container when empty by pushing it completely back into place.

**Please note:** only use additives/plastic items specified as dryer safe. Rinse items that have been treated with stain remover thoroughly in plenty of water before drying. Never dry rubber objects or objects stained with vegetable oils in the dryer.

The Manufacturer is not liable for any damage to laundry resulting from inadequate or incorrect fabric care instructions which have been provided with the garment or article.

Overview of programmes				Options										Approximate drying times	
			Type of textile	Fabrics	Gentle Délicat	Anti-crease Anti-froissage	Drum light Lumière	Buzzer Sonnerie	Key lock Verrouillage porte  3"	Dryness level Niveau de séchage	Pause	Reset Annulation	Start delay Départ différé	Very wet load	Wet load
Programmes / Drying levels															
 Cotton	Séchage renforcé <b>Extra dry</b>	Multi-layered, thick laundry such as: terry towels, terry towelling bath robes.	Cotton or linen hot wash/ coloured laundry  Max. 9 kg	X	X	X	X	X	X	X	X	X	X	225	140
	Prêt à ranger <b>Cupboard dry +</b>	Terry towels, dry towels, bed linen, underwear.		X	X	X	X	X	X	X	X	X	X	210	125
	Prêt à porter <b>Cupboard dry *</b>	Similar types of laundry which do not require ironing such as: dry towels, bed linen, underwear, baby clothes, T-shirts, cotton socks.		X	X	X	X	X	X	X	X	X	X	195	110
	Prêt à repasser <b>Iron dry *</b>	Laundry which requires ironing such as: bed and table linen, dry towels, T-shirts, polo shirts, work clothes.		X	X	X	X	X	X	X	X	X	X	175	90
 Synthetics	Prêt à ranger <b>Cupboard dry +</b>	Laundry with thick, multi-layered areas such as: bed and table linen, track suits, anoraks, blankets.	Synthetic, mixed fibre or cotton easy care (ironing not required) laundry  Max. 4.5 kg	X	X	X	X	X	X	X	X	X	X	105	70
	Prêt à porter <b>Cupboard dry *</b>	Laundry which does not require ironing such as: shirts, blouses, T-shirts, sportswear.		X	X	X	X	X	X	X	X	X	X	85	60
	Prêt à repasser <b>Iron dry</b>	Laundry which requires ironing such as: trousers, dresses, skirts, shirts, blouses.		X	X	X	X	X	X	X	X	X	X	70	50
 Special programmes	 <b>Fibres sensibles Delicate plus</b>	Low drying intensity for delicates and items such as: trousers, dresses, shirts, blouses.	Laundry made from synthetic fibres, such as polyamide, nylon, polyacrylic, etc. Max. 2.5 kg	X	X	X	X	X	X	X	X	X	X	80	60
	 <b>Mix Mixed load</b>	T-shirts, blouses, towels, underwear, sportswear.	Cotton - Synthetic blend Max. 4.5 kg	X	X	X	X	X	X	X	X	X	X	150	100
	 <b>Douceur laine Wool finish</b>	Hats, sweaters, scarfs, gloves.	Textiles made of wool Max. 1 kg	X	X	X	X	X	X	X	X	X	X	6	6
	 <b>XXL XXL</b>	Sleeping bags, trousers, vests.	Laundry that contains downs Max. 3 kg	X	X	X	X	X	X	X	X	X	X	120	120
	 <b>Sport Sport</b>	Sport clothes, functional underwear, running tights.	Synthetic Max. 2.5 kg	X	X	X	X	X	X	X	X	X	X	80	60
Airing	Laundry is aired, refreshed and loosened up for 30 minutes without heating.	All textiles.	 <b>Fraîcheur</b>	—	—	—	—	—	—	—	—	—	—	—	—
Drying times	Completes drying (suitable for all fabrics).		 <b>Minuterie</b>	X	X	X	X	X	X	X	X	X	X	10' 20' 30' 40' 50' 60' 70' 80' 90' 100' 110' 120'	

\* Test programmes according to EN 61121, tested with maximum rated load capacity.

## HOW TO PROCEED IF...

**...you want to check the dryer yourself first:** (If your machine is not functioning correctly, please check the following points before calling the customer service - also refer to relevant chapter in the instructions for use)

<b>Drying takes too long/ Laundry is not dry enough</b>	→	<ul style="list-style-type: none"> <li>• Has the correct drying programme been selected?</li> <li>• Was the inserted laundry too wet (washing machine spin speed less than 1000 rpm)?</li> <li>• Is the door filter dirty (filter indicator light on)?</li> <li>• Is the bottom filter dirty (for more information, refer to the instructions for use)?</li> <li>• Is the room temperature too high?</li> <li>• Are the “End” and “Anticrease” indicator lamps lighting up? The drying cycle is complete and the laundry can be taken out.</li> <li>• If the drying result does not meet your expectation, select a drier programme. You can use the dryness adjustment option (if available) to optimize the drying results.</li> </ul>
<b>The dryer does not operate (after a power failure, always press the “Start (Pause)” button)</b>	→	<ul style="list-style-type: none"> <li>• Is the plug properly inserted into the mains electricity socket?</li> <li>• Is there a power failure?</li> <li>• Has the fuse blown?</li> <li>• Is the door properly closed?</li> <li>• Has a drying programme been selected?</li> <li>• Has the “Start (Pause)” button been pressed?</li> <li>• Has the start delay option been selected?</li> <li>• Is the dryer overloaded? → Please remove a part of the load.</li> </ul>
<b>Door filter, water container or bottom filter indicator lamp on</b>	→	<ul style="list-style-type: none"> <li>• Is the door filter clean?</li> <li>• Is the water container empty?</li> <li>• Has the water container been inserted correctly?</li> <li>• Is the bottom filter clean and inserted correctly?</li> </ul>
<b>Water droplets underneath the dryer</b>	→	<ul style="list-style-type: none"> <li>• Has the bottom filter been inserted correctly?</li> <li>• Have all lint on the bottom filter seal and the door seal been wiped away?</li> <li>• Has the water container been inserted correctly?</li> <li>• If the direct drain connection is used, is it tight?</li> <li>• Is the dryer levelled?</li> </ul>

**...you want to care of and clean your dryer:**

<b>Clean the filter at the end of every cycle</b>	→	<ul style="list-style-type: none"> <li>• Brush lint using a soft brush or your fingertips.</li> <li>• Close the filter.</li> <li>• Push the filter back into place.</li> </ul>
<b>Empty the water container at the end of every drying cycle</b>	→	<ul style="list-style-type: none"> <li>• Pull the handle to remove the water container.</li> <li>• Empty the water container.</li> <li>• Replace the water container when empty by pushing it completely back in place.</li> </ul>
<b>Clean the bottom filter every fifth cycle</b>	→	<ul style="list-style-type: none"> <li>• Clean the bottom filter under running water.</li> <li>• Remove all fluffs from the seals.</li> <li>• Clean the bottom filter housing (for further information see chapter “Cleaning the Bottom Filter” in the Instructions for Use).</li> <li>• See the instruction for use for further information how to clean the bottom filter.</li> </ul>

## FAILURE CODES

In case of a malfunction of the dryer, one the following failure codes could be displayed:


<b>FAILURE CODE</b>	<b>You can check yourself before calling the After-Sales Service.</b>
<b>F01 – F04</b>	Please call the After-Sales Service.
<b>F05</b>	Turn the dryer OFF and unplug it. Make sure that the room temperature is between 5°C and 35°C. Wait for 1 hour. Plug the dryer back in and restart it. If the failure reoccurs, please call the After-Sales Service.
<b>F06</b>	Turn the dryer OFF and unplug it. Make sure that the room temperature is between 5°C and 35°C. Wait for 1 hour. Plug the dryer back in and restart it. If the failure reoccurs, please call the After-Sales Service.
<b>F07</b>	Turn the dryer OFF and unplug it. Make sure that the room temperature is between 5°C and 35°C. Unload approximately one half of the laundry from the dryer. Wait for 1 hour. Plug the dryer back in and restart it. If the failure reoccurs, please call the After-Sales Service.
<b>F10 – F24</b>	Turn the dryer OFF and unplug it. Wait for 30 minutes. Plug the dryer back in and restart it. If the failure reoccurs, please call the After-Sales Service.
<b>Start LED blinks 2 times per second when pressed</b>	Make sure that the door is correctly closed and the bottom filter correctly positioned. If the failure reoccurs, please call the After-Sales Service.
<b>Bottom filter LED is blinking, Start LED blinks 2 times per second when pressed</b>	Make sure that the bottom filter is correctly positioned. If the failure reoccurs, please call the After-Sales Service.

Before using the machine, please also read the Instructions For Use carefully!

GB

AZA-HP 9782

## Quick Reference Guide

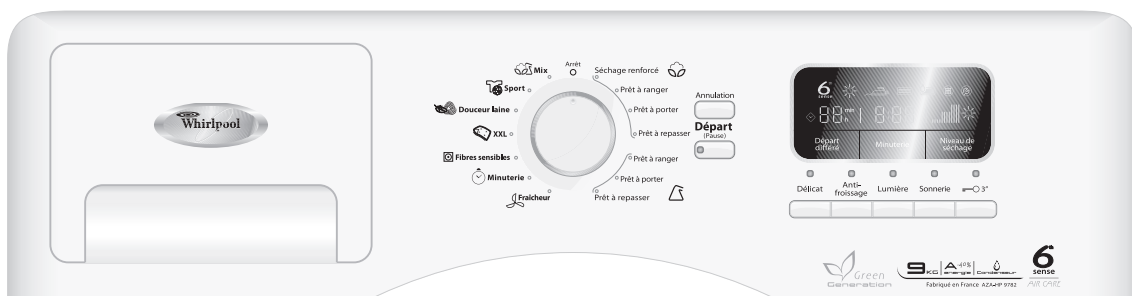

### Indicator lamps



#### Programme selector knob

The drying programme is selected by turning this knob. The “Start (Pause)” indicator lamp flashes.

#### Départ (Pause)



#### “Start (Pause)” button

The drying programme is started by pressing this button. The indicator lamp lights up.



#### Door filter

The indicator lamp lights up when the door filter needs to be cleaned.

**Clean the door filter at the end of every drying cycle.**



#### Bottom filter

This indicator lamp lights up when the bottom filter needs to be cleaned.

This indicator lamp is blinking, when the bottom filter is not correctly positioned. Please take care that the bottom filter is correctly inserted and the handle is fully engaged.



#### Water container

The indicator lamp lights up when the water container needs to be emptied. The drying cycle is automatically interrupted. Empty the container and restart the drying program.

**Empty the water container after every drying cycle.**



#### “Remaining time” display

Depending on the programme selected a default drying time is displayed. After start of cycle the time displayed is corrected depending on the volume, type and moisture of the laundry.

**The drying time specified is a calculated value which will be updated during the drying cycle.**



The flashing lines indicate that the calculation is running. The remaining time will be updated.



#### End

The drying programme is finished. Please unload the dryer.



#### Overdry protection / 6<sup>th</sup> Sense

The indicator lights up when a humidity controlled programme is selected, to indicate the activated protection function.



#### Dryness level

By selecting this option you can adjust the dryness level of the laundry. After the selection of the desired programme you can choose the dryness level by pressing the button.



Pressing 1 time you select a more dry level

or



Pressing 2 times you select a less dry level


or



Pressing 3 times you select again normal dry level.

Once chosen this option together with a certain program, it's automatically selected when you use again this program. Changing or deselecting this option is possible according the description above.

## Annulation **Reset**

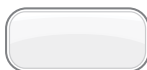

During the selection phase of the program, pressing this button will switch off all settings of selected options.

During running drying cycle the pressing of the button will stop the cycle and set the dryer back in selection mode.

The button needs to be pressed for 3 seconds.

## **Key lock**

For child protection reasons, this option can be used to lock all functions of the user interface.

To activate/deactivate this option, the button needs to be pressed for 3 seconds. The only remaining function is the "Off" position at the programme selector knob. The key lock function is still active even when the selector knob is turned to "Off" position or the door is opened. The function has to be deactivated.



## **Dry time adjustment**

Turn the programme selector knob to "Time" position. Press the button "Drying time" to select the duration of cycle in ten minutes steps up to 90 minutes.

## **Gentle**

Selecting this option will reduce the drying temperature at the end of the drying cycle and thus the thermal strain on delicate laundry. Due to the lower temperature, the laundry will not be as dry as after a drying cycle without this option.

## **Anticrease**

This option can be chosen to reduce wrinkling, when the laundry is not unloaded directly after end of the cycle. The drum turns from time to time for maximum 12 hours. It can be interrupted at any time by switching off the dryer. This option deactivates the "Buzzer" function, if it is activated.

## **Drum light**

The drum light can be switched on and off.

## **Buzzer**

 
Pressing this option, an acoustic signal is indicating the end of the drying cycle.

This option deactivates the Anticrease function, if it is activated.


## **Start delay**

Delays the start of the drying cycle by 1 to 12 hours. Each time the button is pressed, the start time is delayed by 1 hour. Press the "Start (Pause)" button to confirm the final selection and to start the dryer. The "Start delay" icon flashes and the time is counted down in 1-hour intervals. During the countdown, the drum will turn from time to time to redistribute the laundry. To cancel or change the previously set time delay, set the index of the programme selector knob to "Off" position, or open the door.


## Sonnerie




## Délicat

 

## Anti-froissage

 

## Lumière

 

**5019 307 01494**

(Subject to technical modifications)